



FLEX

PRODUCT INSTRUCTIONS

BEFORE YOU START

Flex is designed for external use only.

QUICK START GUIDE

 
ON/OFF



CHANGE PATTERN




CHANGE INTENSITY



USB CHARGING

Plug in to USB-A to charge

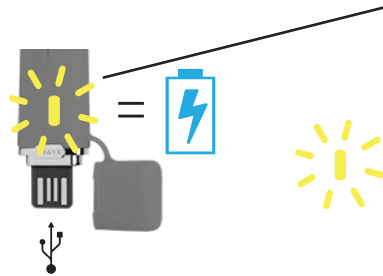

SPECIAL NOTE:

If NO light appears, re-insert opposite side and / or press 

Flashing Light = Charging
Solid Light = Fully Charged

WATERPROOFING

Wash with soap & water with cap closed.



BATTERY LIFE

Do not leave product in fully discharged state for more than a week as it can permanently damage the battery. It is best to charge the product soon after use.

TRAVEL LOCK

 To Lock, hold  for 4 seconds


 To Unlock, hold  for 4 seconds



FLEX will vibrate to confirm.

PRODUCT SAFETY


Not for anal use.


Do not use silicone based lubricant.
Use only water based lubricant.