

DUET FLEX

PRODUCT INSTRUCTIONS

BEFORE YOU START

Duet Flex is designed for external use only.

QUICK START GUIDE

ON/OFF

CHANGE PATTERN

CHANGE INTENSITY








USB CHARGING

Plug in to USB-A to charge

SPECIAL NOTE:

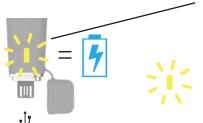

If NO light appears, re-insert opposite side and / or press

Flashing Light = Charging Solid Light = Fully Charged

WATERPROOFING

Wash with soap & water with cap closed.





BATTERY LIFE

 
Do not leave product in fully discharged state for more than a week as it can permanently damage the battery. It is best to charge the product soon after use.

TRAVEL LOCK



To Lock, hold for 4 seconds







To Unlock, hold of for 4 seconds



A PRODUCT SAFETY





Do not use silicone based lubricant. Use only water based lubricant.